



INSTALLATION OF THE ROPE


1 MAKE BIGHT

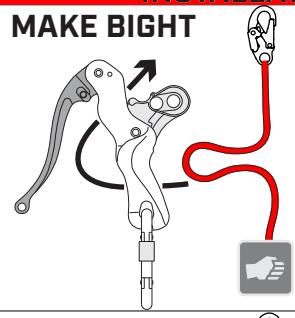


2 FEED THROUGH

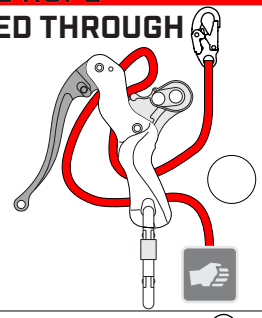


3 WRAP CAM

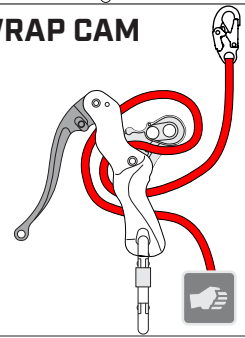

4 PULL TIGHT

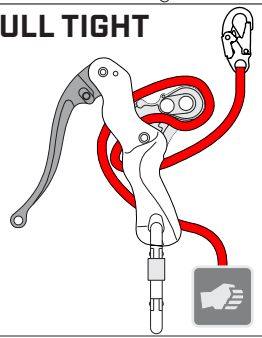

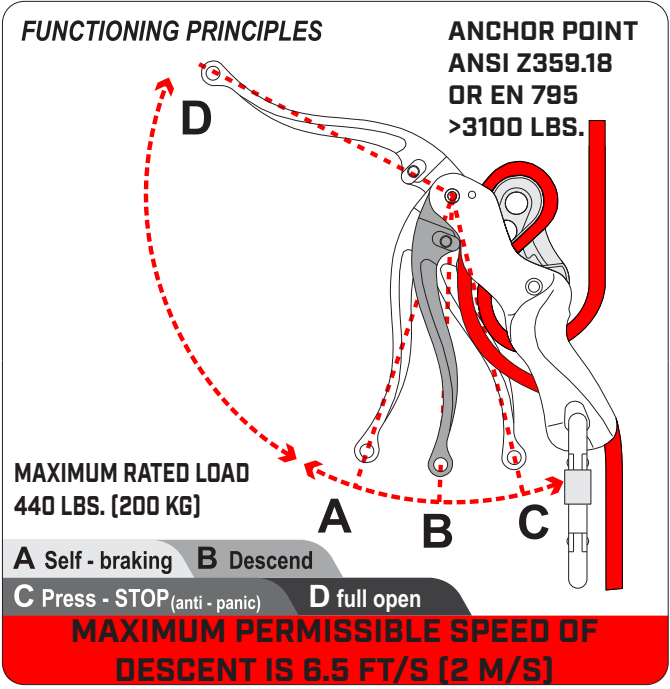

**ROPE INSTALLATION
ON REVERSE SIDE**